



Installation Instruction

Performance Turbo Inlet pipe



SAAB NG9-5 V6 2010-2011

This installation instruction is based on an install on a MY2011 SAAB NG9-5 V6.

PART NUMBER: IR-160



Description

This instruction shows how to replace the OEM turbo inlet pipe with do88 performance turbo inlet pipe.

At this type of installation we always recommend that you have mechanical experience and knowledge about safety during work on vehicles.


Parts List

- 1pc do88 Performance inlet pipe
- 2pcs do88 Performance inlet hoses
- 1pc 6mm plastic coupler
- 1pc aluminium hose connection
- 2pcs spring hose clamp 17mm
- 1pc hose clamp 50-70mm
- 2pcs hose clamp 80-100mm
- 1pc hose clamp 90-110mm
- 1pc M6x16mm hex screw



Step 1

Remove 1x 7mm hose clamp and 1x T25 screw.

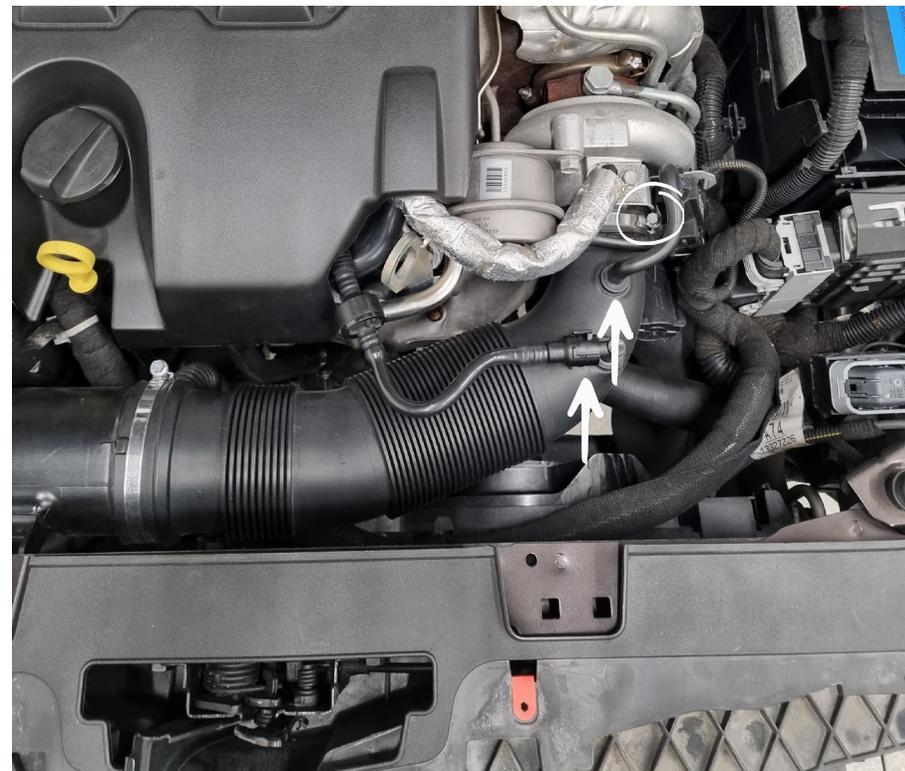

Step 2

Remove 1x 7mm hose clamp and remove 2x vacuum lines from the OEM plastic inlet pipe.
Remove the pipe from the car.



Step 3

Install the included reed nut on the bracket as shown on picture.



Step 4

Install the 1x included plastic coupler with 17mm spring clamp and 1x included aluminum hose connection with 17mm spring clamp as shown on picture.



Step 5

Re-install all other parts in reverse order.



Thank you for purchasing another do88 product.

Please check our website frequently for new product releases.
If you have any questions or concerns about this product please do not
hesitate to contact us: do88.se/contact