



Installation Instruction

Performance Intake system



SAAB NG9-5 V6 2010-2011

This installation instruction is based on an install on a MY2011 SAAB 9-5 V6.



Description

This instruction shows how to replace the OEM Intake system with do88 performance Intake system.

At this type of installation we always recommend that you have mechanical experience and knowledge about safety during work on vehicles.

Parts List

- 1pc BMC performance air filter
- 1pc do88 Heat shield black
- 1pc do88 Intake hose
- 1pc M10 nylon lock nut
- 1pc M10 washer 20x2mm
- 1pc M10 washer 35x3mm
- 1pc M10x40mm hex screw
- 1,6m rubber sealing
- 2pcs zip tie 4.8x370mm
- 1pc 30mm air filter for S.A.I replacement



Step 1

Remove 2x hose clamp and remove 1x T25 and remove the inlet pipe from the car.

Disconnect the cable connector located on the AMM. Press on both sides on the plastic coupler and remove the plastic hose from the filter box.



Step 2

Remove 2x plastic clips.

Remove the air filter box from the car by lifting the box upwards and towards the engine.




Step 3

Remove 2x T20 screws and remove the AMM from the air filter box.



Step 4

Press on both sides on the plastic coupler and remove the secondary air injection hose from the car.

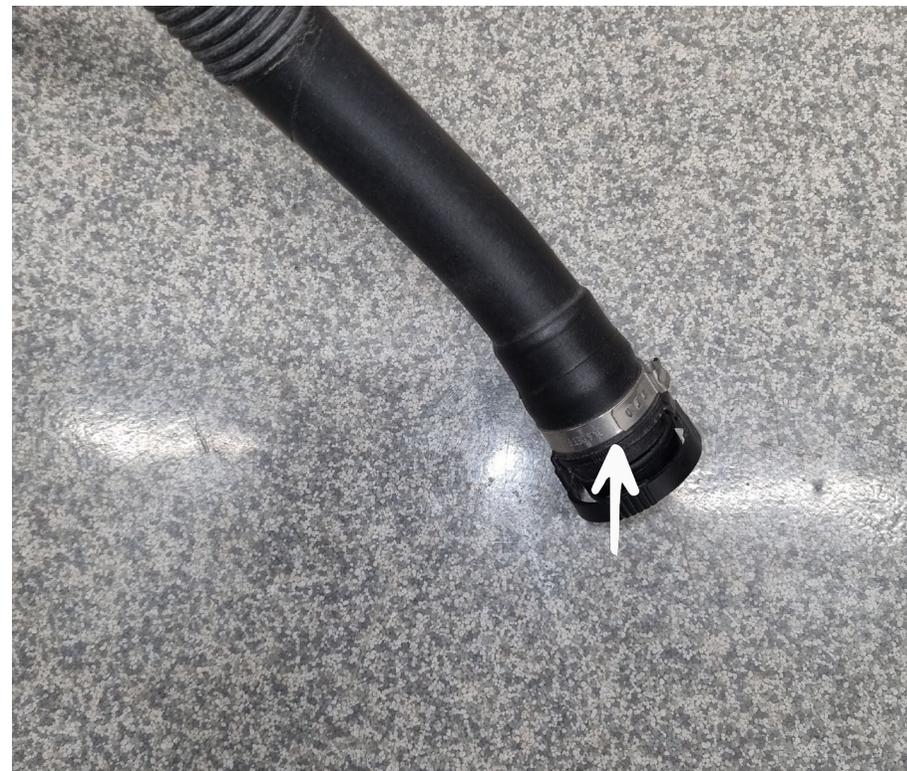

Step 5

Remove the OEM hose clamp with a small flat head screwdriver and use a heat gun or a lighter, gently heat up the plastic pipe to separate the hose and the plastic coupler.



Step 6

Install the included air filter on the coupler and tighten the hose clamp.



Step 7

Install the plastic coupler with air filter back in the car.



Step 8

Install the included rubber sealing as shown on picture.



Step 9

Install the do88 heat shield with the included M10 bolt and M10 washers. Use the 35mm washer at the bottom of the bracket and the 20mm washer at the top of the bracket. as shown on picture.
Use 1x included zip tie and install around the ac condenser pipe and into the heat shield and 1x included zip tie around vacuum module and the ac condenser pipe.



Step 10

If do88 performance intake system is installed with OEM turbo inlet pipe: Install the AMM directly on the OEM plastic pipe without the included do88 hose.

Re-install all other parts in reverse order.



Step 11

If do88 performance intake system is installed with do88 performance intake pipe: Install the AMM directly with the included do88 hose.

Re-install all other parts in reverse order.



Thank you for purchasing another do88 product.

Please check our website frequently for new product releases.
If you have any questions or concerns about this product please do not
hesitate to contact us: do88.se/contact