



# Installation Instruction

Performance Inlet Hose

---



VAG 2.0 TSI  
EA888 Gen4 ( 245hk )

PART NUMBER: KIT - 241



## Description

---

This instruction shows how to replace the OEM SAMPLE TEXT with do88 performance SAMPLE TEXT.

At this type of installation we always recommend that you have mechanical experience and knowledge about safety during work on vehicles.

## Parts List

---

- 1pc do88 Performance Intake hose
- 1pc do88 Turbo inlet joiner
- 1pc do88 Lock plate
- 1pc M6x16mm Allen screw
- 1pc 50-70mm hose clamp
- 1pc 70-90mm hose clamp



## Step 1

Loosen 1x 7mm hose clamp.

Remove spring clamp. Remove the OEM intake hose from the car.

Removing the engine cover may make more room for next steps.



## Step 2

Remove 1x T30 Torx screw and rotate the plastic adapter clockwise and remove from the turbo.



## Step 3

Remove the OEM O-ring from the plastic adapter and install on the do88 turbo inlet joiner.

Use some lubricate or engine oil on the O-ring.



## Step 4

Install the do88 turbo inlet joiner and slide the lock plate into the slot as shown on picture and lock it in position with the included M6x16mm Allen screw.




## Step 5

Install the do88 intake hose with the included hose clamp as shown on picture.

TIP: Use some lubricate or engine oil on the turbo inlet adapter and inside the hose to be able to rotate the hose.

Tighten the hose clamp just enough that it's till able to rotate on the hose but also slide underneath the tabs on the turbo.

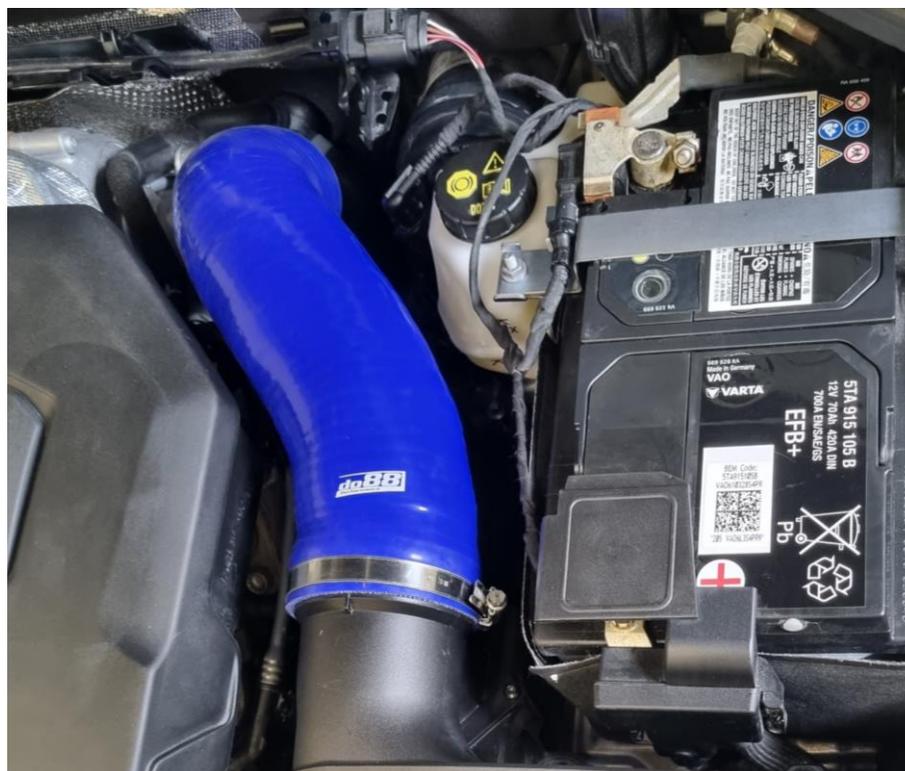

## Step 6

Re-install all other parts in reverse order.



*Thank you for purchasing another do88 product.*

Please check our website frequently for new product releases.  
If you have any questions or concerns about this product please do not  
hesitate to contact us: [do88.se/contact](https://do88.se/contact)